


Airbag Control Module I/O Signal

AIRBAG SYSTEM (TYPE B) (DIAGNOSTICS)

5. Airbag Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

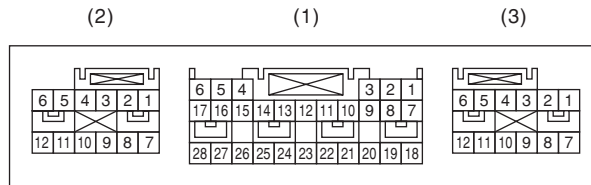

AB-01085

- Terminal numbers in airbag control module connector are shown in the figure.
- Airbag warning light illuminates when the connector is removed from airbag control module.

Airbag Control Module I/O Signal

AIRBAG SYSTEM (TYPE B) (DIAGNOSTICS)

Item		Control module terminal No.
Data link connector		(1) - 12
Combination meter		(1) - 3
Battery power supply	Common use fuse	(1) - 6
	Dedicated fuse	(1) - 5
Passenger's airbag module level one	+	(1) - 10
	—	(1) - 11
Passenger's airbag module level two	+	(1) - 8
	—	(1) - 7
Driver's airbag module level one	+	(1) - 14
	—	(1) - 13
Driver's airbag module level two	+	(1) - 16
	—	(1) - 17
Front sub sensor LH	Power supply and communication	(1) - 15
	GND	(1) - 26
Front sub sensor RH	Power supply and communication	(1) - 9
	GND	(1) - 20
Ground line (GND)		(1) - 27
		(1) - 28
Passenger's airbag OFF indicator		(1) - 1
Passenger's airbag ON indicator		(1) - 18
Seat belt buckle switch LH	+	(2) - 11
	—	(2) - 8
Seat position sensor LH	+	(2) - 3
	—	(2) - 4
Seat belt pretensioner LH	+	(2) - 2
	—	(2) - 1
Side airbag sensor LH	Power supply and communication	(2) - 7
	GND	(2) - 9
	+	(2) - 10
	—	(2) - 12
Side airbag module LH	+	(2) - 6
	—	(2) - 3
Seat belt pretensioner RH	+	(3) - 5
	—	(3) - 6
Side airbag sensor RH	Power supply and communication	(3) - 12
	GND	(3) - 10
	+	(3) - 9
	—	(3) - 7
Side airbag module RH	+	(3) - 1
	—	(3) - 2
Occupant detection control module	+	(3) - 11
	—	(3) - 8

B: WIRING DIAGRAM

Refer to the WI section wiring diagram. <Ref. to WI-85, WIRING DIAGRAM, Airbag System.>