

5. Airbag Connector


A: PROCEDURE

Buckle switch

1) How to disconnect

(1) Move the slide lock (A) in the direction of arrow.

(2) While holding the slide lock (A) in the moved position, disconnect the connector.

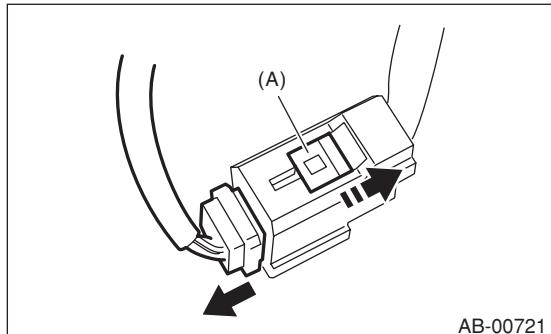


AB-00721

CAUTION:

When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.

2) How to connect

Holding the connector (A), and push it in carefully until a clicking sound is heard.

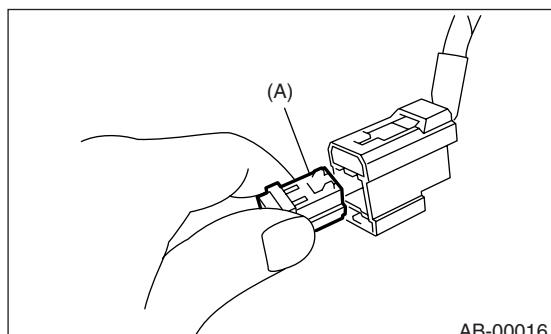

AB-00016

CAUTION:

Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.