

6. “T-type” Tire

A: NOTE

Vehicles for Canada excluding non-turbo model are supplied with “T type” spare tires for temporary use.

CAUTION:

- Do not use a tire chain with the “T-type” tire. Because of the smaller tire size, a tire chain will not fit properly and will result in damage to the vehicle and the tire.
- Do not drive at a speed greater than 100 km/h (62 MPH).
- Drive as slowly as possible and avoid passing over bumps.

B: REPLACEMENT

Refer to “Steel Wheels” for removal and installation procedures of the “T Type.” <Ref. to WT-5, REMOVAL, Steel Wheel.>

CAUTION:

The “T-type” tire is only for temporary use. Replace with a conventional tire as soon as possible.

C: INSPECTION

- 1) Check the tire air pressure.

Specifications:

420 kPa (4.2 kg/cm², 60 psi)

- 2) Take stones, glass, nails, etc. out of the tread groove.
- 3) Check the tires for deformation, cracks, partial wear, or wear.

CAUTION:

Replace the tire with a new one if faulty.